

Ambient External


Ambient Internal

Parts supplied

- | | |
|---|---|
| a air outlet connector at window side | d rain protector |
| b exhaust pipe | e adjustable window slider outside |
| c air outlet connector at product side | f adjustable window slider inside |

2°

Attach the rain protector against the outside window slider for horizontal mounting

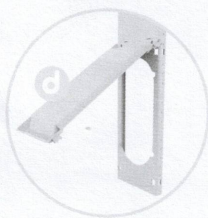

4°

Install the window slider into the window with the rain protector already embedded

part external **e**

3°

Insert the connector onto the window slider

part internal **f**

screw
counterclockwise

1°

Screw the window side connector into the exhaust pipe

5°

Insert the connector onto the product

to fit in
and turn

